

Installation instructions

Zip HydroTap G5

Faucets - Celsius All-in-One Arc



English



French

Visit our website to
download the manuals

Table of contents

SECTION 1: Using these instructions	2
1.1 Using these instructions.....	2
SECTION 2: Performance data & regulatory standards	3
SECTION 3: Generic installation requirements	4
3.1 Tools needed for faucet installation	4
SECTION 4: Installation - All-in-One Celsius Arc.....	5
4.1 Positioning	5
4.2 Cut the hole	5
4.3 Familiarize yourself with the mains connections	6
4.4 Familiarize yourself with the faucet connections	7
4.5 Mount and secure the faucet.....	8
4.6 Connect the water supply	9
4.7 Be careful with the sparkling pipework	10
4.8 Command Center connections for the All-in-One Celsius Arc.....	10
SECTION 5: Cleaning and maintenance	11
5.1 Cleaning.....	11

SECTION 1: Using these instructions

1.1 Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Center, and HydroTap Command Center installation instructions found online, prior to installation of, or any change to, the complete system.



WARNING




**Read the
instructions**

**Before commencing the installation, download
& read the HydroTap Command Center
installation instructions**

SECTION 2: Performance data & regulatory standards

 - The Celsius AIO faucet has been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, ASSE 1023, and ASME A112.18.1/CSA B125.1 when used as part of the BCS60, BCS20, and BCS Home systems.
-
- XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

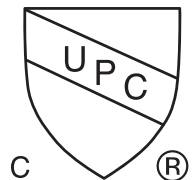

SECTION 3: Generic installation requirements

3.1 Tools needed for faucet installation

In addition to normal tools, the following (or equivalent equipment) will be required, (not supplied).

- 2", (50mm) diameter sheet metal hole punch for sinks.
- 2", (50mm) diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly.



Be aware of the risks of hazards which could cause harm when using tools.

Assess the risks before starting the installation.

SECTION 4: Installation - All-in-One Celsius Arc

 
 
4.1 Positioning

Position the faucet such that it dispenses into the sink bowl with clearance for a cup or tea pot.




Ensure that faucets are positioned to minimise the risks of scalding by dispensing boiling water while using the faucet.

Position Command Center and faucet as close together as possible.
See below.

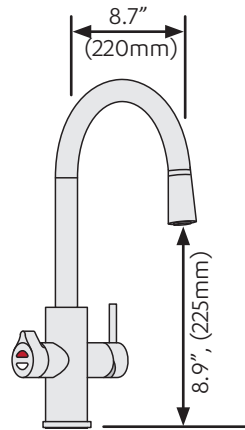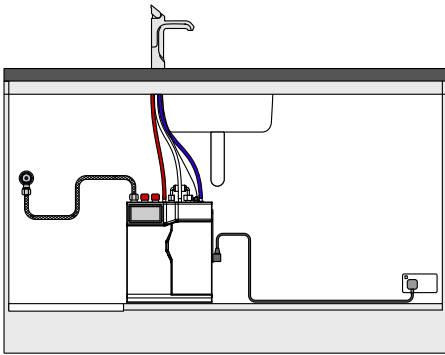


 4.2 Cut the hole




- Cut a 2", (50mm) hole in the worktop / sink.
- Make sure the faucet location will allow the spout to drain into the sink.


 
4.3 Familiarize yourself with the mains connections

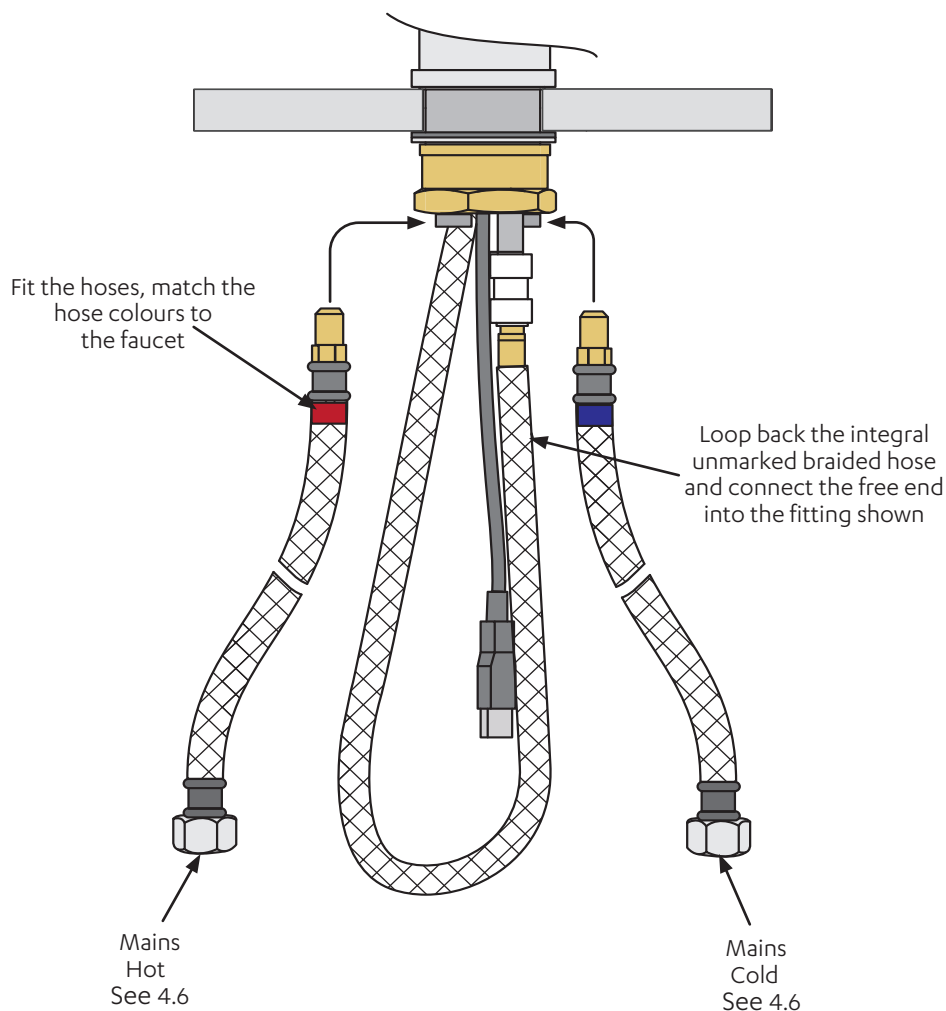

 4.4 Familiarize yourself with the faucet connections

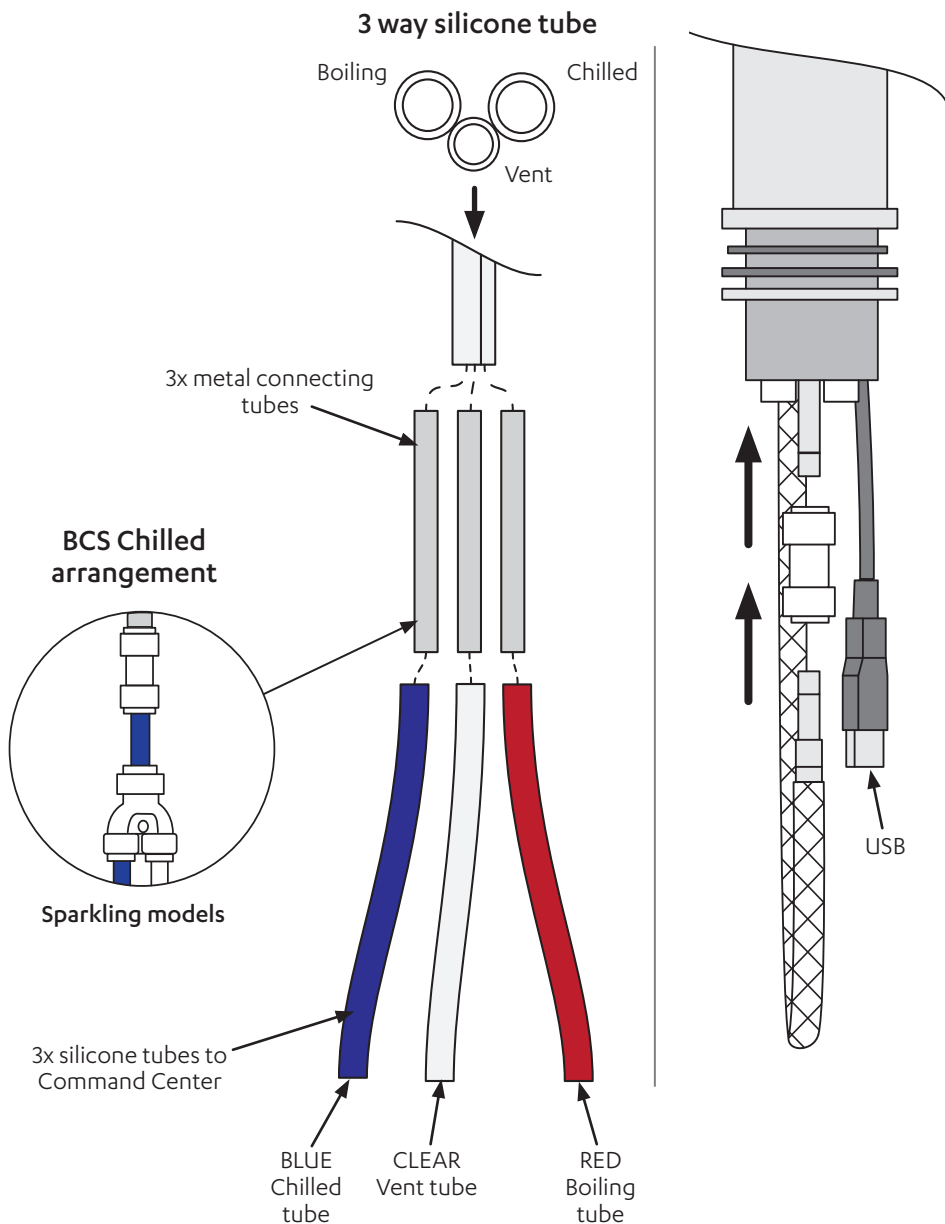

  4.5 Mount and secure the faucet

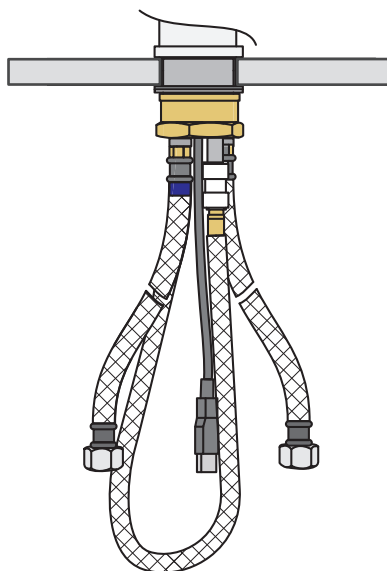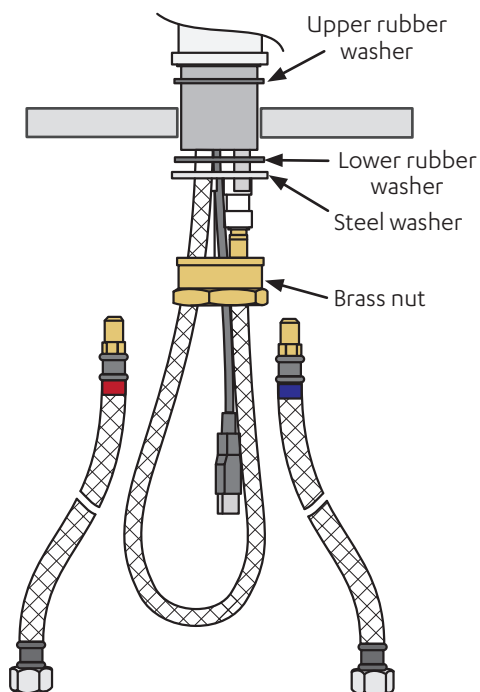


4.6 Connect the water supply

All fittings are supplied apart from the isolation valve.




 Valves and fittings must be sealed with PTFE tape

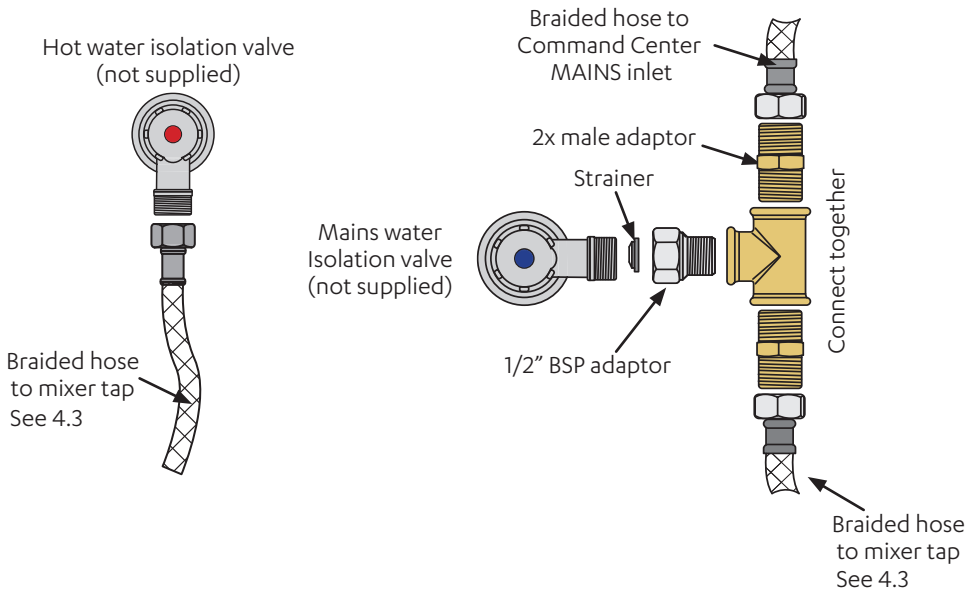

4.7 Be careful with the sparkling pipework

 - Silicone tubes are soft and easily deformed. It is essential to avoid kinks, loops and sags.
- Loosely cable-tie the rigid sparkling pipework to an adjacent braided hose to avoid kinks and squeezing.

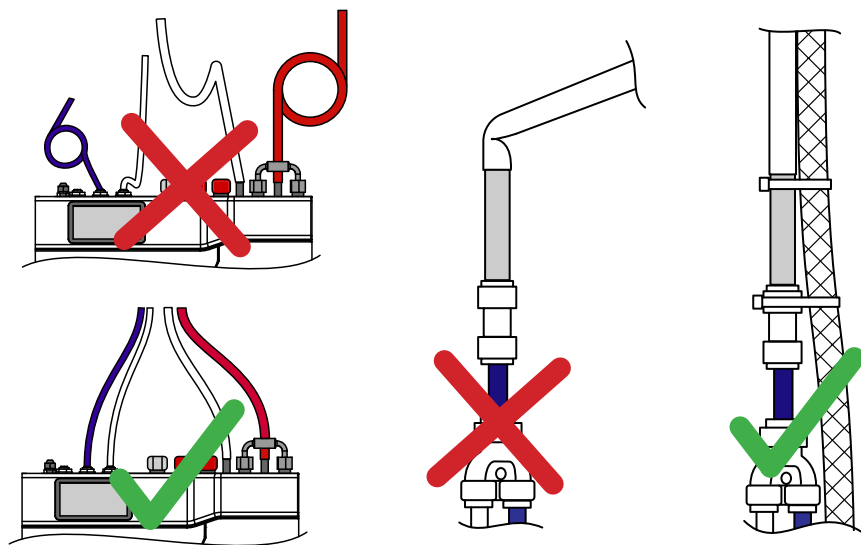

4.8 Command Center connections for the All-in-One Celsius Arc

Mains In	Mains potable water supply.
USB	Connected the faucet.
Boiling out	Red silicone tube from faucet. Cut to length.
Chilled out	(BCS) Blue JG pipe from faucet. Cut to length. (BC) Blue silicone tube from faucet. Cut to length.
Vent	Clear silicone tube from faucet. Cut to length.
Sparkling out	White JG pipe from faucet. Cut to length.

5.1 Cleaning

- Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth.



IMPORTANT!

- Do not use air-drying disinfectant sprays.
- This could cause permanent malfunction and void warranty.



Manufactured by Zip Heaters (Australia) Pty Ltd

67 - 77 Allingham Street,
Condell Park NSW 2200
Australia

Distributed in US and Canada by: Culligan International Company

9399 West Higgins Road, Suite 1100
Rosemont, IL 60018
www.na.zipwater.com

Call US Toll Free 1-833-233-2358 for assistance, service, spare parts or enquiries.

As Zip policy is one of continuous product improvement, changes to specifications may be made without prior notice. Images in this booklet have been modified and may not be true representations of the finished goods.

The terms “Zip” and “HydroTap” are registered trade marks of Zip Heaters (Aust) Pty Ltd.

The Celsius AIO faucet has been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, ASSE 1023, and ASME A112.18.1/CSA B125.1 when used as part of the BCS60, BCS20, and BCS Home systems.

XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

© 2021 Zip Heaters (Aust) Pty Ltd

